

Mounting Instructions For Thermostat


Using the mounting template on this sheet locate the two screw anchor centers and the center for the cable feed hole.

Drive the screw anchors into the wall and tighten the screws to mount the anchor permanently in place.

Drill the cable feed hole using a $\frac{3}{4}$ " drill bit. Fish the thermostat wire through the hole.

Connect the thermostat wires to the terminal block on the thermostat base as shown below.

The thermostat wires should be connected to printed circuit board in the cooler electrical box in exactly the same way as shown below.

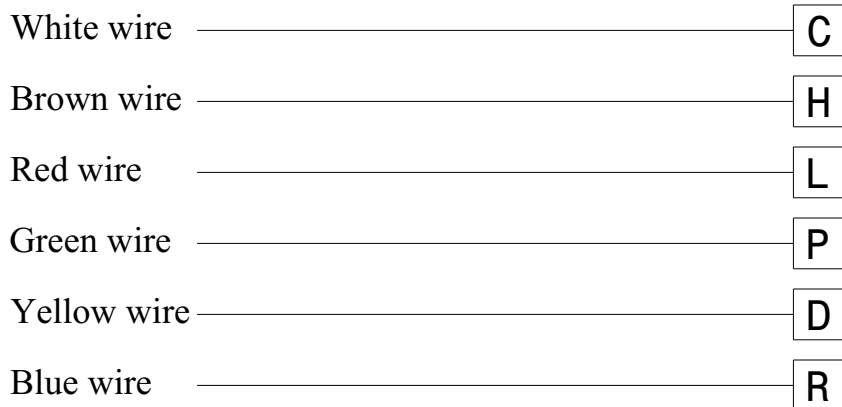


Mount the thermostat base to the wall using the screws in the wall anchors. Snap the thermostat cover into place on the thermostat base.

THERMOSTAT MOUNTING TEMPLATE

INSTALL HOLLOW WALL
SCREW ANCHORS
PER MOUNTING INSTRUCTION

TOP

DRILL 1 HOLE
 $\frac{3}{4}$ " DIAMETER
FOR CABLE FEED
THROUGH.

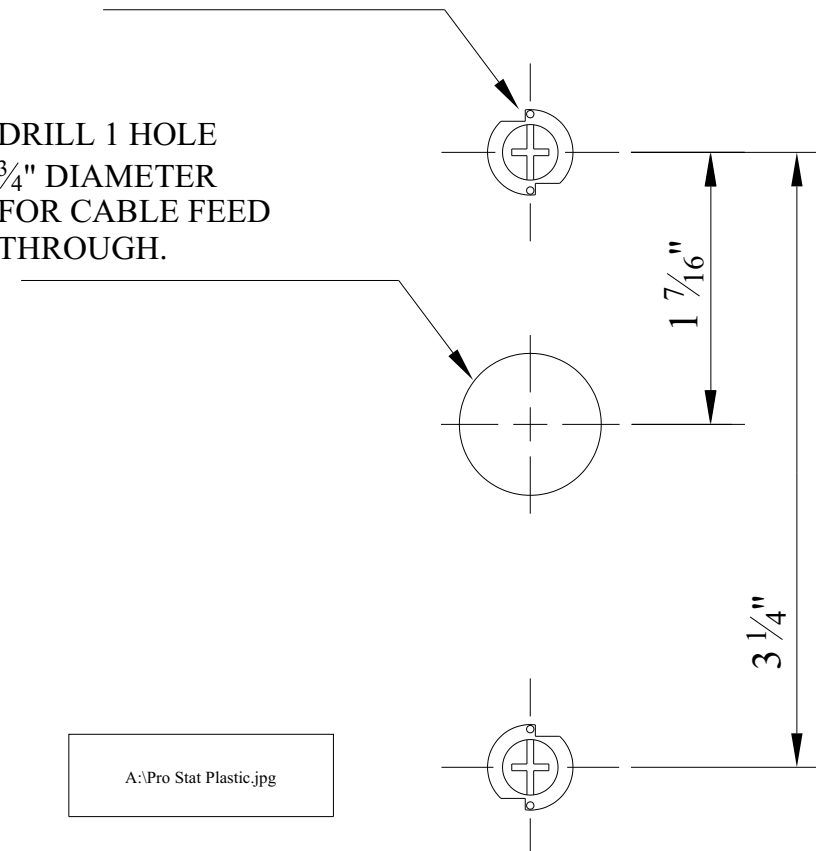

PHOENIX MFG., INC.
P.O. BOX 20663
PHOENIX, AZ. 85036